

# Genome Assembly Workshop

Deb Triant

University of Virginia

Dept Biochemistry & Molecular Genetics

Programming for Biology

Cold Spring Harbor Labs

23 October 2023



1

# Genome Assembly Workshop

1. Genome assembly with Canu

2. Python problem set



2

## Genome Assembly Workshop

Genome assembly with PacBio data using Canu

### Why are we using this program?

- \*Relatively\* user-friendly and easy to install
- Not computationally intensive with small data sets
- Well maintained and documented
  - version 2.2, released August 2021

3

3

## Canu assembler


- Canu is a long-read assembler that specializes in PacBio or Oxford Nanopore data
- Derived from Celera assembler
- Corrects reads, trims suspect regions (e.g., adaptors) then assembles the corrected reads
- Can be run with one command to do all steps or each step can be run separately (correcting, trimming and assembling).

4

4

A full Canu run includes three stages: correction (green), trimming (red), and assembly (purple).

Generates k-mer histogram and conducts all-vs-all overlaps

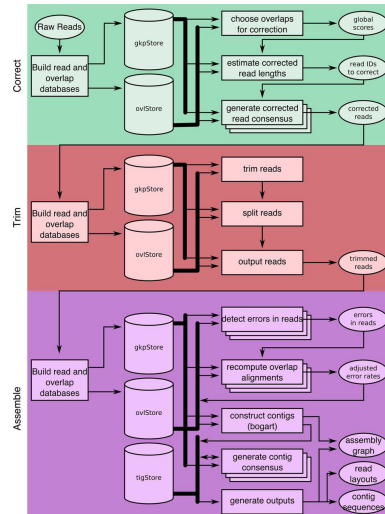

Sergey Koren et al. *Genome Res.* 2017;27:722-736

© 2017 Koren et al.; Published by Cold Spring Harbor Laboratory Press



#### Correct:

Select best overlaps to generate corrected reads. Uses longest 40X reads for correction

#### Trim:

Identifies unsupported regions and trims reads to longest supported range

#### Assemble:

Identify sequencing errors, constructs best overlap graph and outputs contigs.

5

## Using Canu

Outputs contigs. No scaffolding.

The unitig construction task finds sets of overlaps that are consistent, and uses those to place reads into a multialignment layout. The layout is then used to generate a consensus sequence for the unitig or a “high-confidence contig”

For eukaryotic genomes, coverage more than 20x sufficient but 30-60x is recommended minimum. Less complex genomes, can work down to 20X coverage.

More coverage, more long reads for Canu to assemble resulting in better assemblies.

6

6

## Canu Citations

- Koren S, Walenz BP, Berlin K, Miller JR, Phillippy AM. Canu: scalable and accurate long-read assembly via adaptive k-mer weighting and repeat separation Genome Research. (2017).
- Koren S, Rhie A, Walenz BP, Dilthey AT, Bickhart DM, Kingan SB, Hiendleder S, Williams JL, Smith TPL, Phillippy AM. De Novo assembly of haplotype-resolved genomes with trio binning. Nature Biotechnology. (2018).
- Nurk S, Walenz BP, Rhie A, Vollger MR, Logsdon GA, Grothe R, Miga KH, Eichler EE, Phillippy AM, Koren S. HiCanu: accurate assembly of segmental duplications, satellites, and allelic variants from high-fidelity long reads. Genome Research. (2020).

7

7

## Installing Canu

- We will use the sample Pac Bio *E. coli* data found on the canu homepage: <http://canu.readthedocs.io>  
25x *E.coli* fastq files with quality scores.

Found on canu quickstart tutorial:

<https://canu.readthedocs.io/en/latest/quick-start.html#quickstart>

8

8

## Installing Canu

### Getting Help

/canu/documentation/source - help docs

\$ canu command line options

\$ canu -options parameter options

<https://canu.readthedocs.io/en/latest/>

9

9

## Installing Canu

**To install Canu - conda install NOT recommended:**

Download current release - Canu v2.2

- released August 2021

<https://github.com/marbl/canu/releases>

- click on green "Latest" tab

\$ wget <https://github.com/marbl/canu/releases/download/v2.2/canu-2.2.Darwin-amd64.tar.xz>

\$ conda install -c anacondawget -> if wget not found  
#make sure file downloaded 100%!

\$ tar -xJf canu-2.2.Darwin-amd64.tar.xz pacbio.fastq

-x extract

-J specific to .xz files

-f file

10

10

## Installing Canu

Where is it installed?

- Executables found in:  
canu-2.2./      \*\*README File
- Add the Canu directory to path:
  - export PATH=/Users/**student**/canu-2.2/bin:\$PATH  
\*\* specific to YOUR pathway!
- You can run the assembler with:
  - canu-2.2/bin/canu
- From the command line: canu

11

11

## Canu Sample Data

Download canu test E.coli dataset:

<http://canu.readthedocs.io/en/latest/quick-start.html?highlight=25x>

- 25X subset (223Mb)

Where do you want them to download?

- `wget -O pacbio.fastq`  
`https://obj.umiacs.umd.edu/marbl_publications/mhap/raw/ecoli_p6_25x.filtered.fastq`
  - O naming downloaded file `pacbio.fastq`

12

12



## Running Canu

- We will run default with correcting, trimming and assembling all in one command:

```
$ canu -p ecoli -d ecoli-pacbio genomeSize=4.8m -pacbio-raw
pacbio.fastq saveReads=true > CanuRun_20231023.out \
2>CanuRun_20231023.log & **What are we saving?
                        **What does the "&" do?

*where are reads....include pathway in your command
-p assembly-prefix
-d output directory
input types:
-pacbio-raw -pacbio-corrected -nanopore-raw -nanopore-corrected fastq or
fasta format

\ = line continuation - don't need if you have room to write it out!!!
```

**\*\*USE THE HELP DOCS!!!!**

15

15

## Running Canu - Manual assembly

### Correct, Trim and Assemble Manually

- You can do the three top-level tasks by hand. This would allow trying multiple construction parameters on the same set of corrected and trimmed reads.

Previous command to correct, trim & assemble:

```
canu -p ecoli -d ecoli-full genomeSize=4.8m -pacbio-raw
pacbio.fastq saveReads=true 2>full_out_20231023.log **to save
output
```

16

16



## Running Canu - Manual assembly

First correct the raw reads:

```
canu -correct -p ecoli -d ecoli-manual genomeSize=4.8m
-pacbio-raw your_path/canu/pacbio.fastq
saveReads=true 2>correct_out_20221017.log
```

Then trim the output of the correction:

```
canu -trim -p ecoli -d ecoli-manual genomeSize=4.8m
-pacbio-corrected ecoli-manual/ecoli.correctedReads.fasta.gz
saveReads=true 2>trim_out_20231023.log
```

\*corrected reads created during first step

17

17

## Running Canu - Manual assembly

Finally, assemble the output of the trimming twice using two error rates (can use as many as you like):

```
canu -assemble -p ecoli -d ecoli-erate-0.013 genomeSize=4.8m
correctedErrorRate=0.013 -pacbio-corrected ecoli-
manual/ecoli.trimmedReads.fasta.gz saveReads=true
2>assemble-0.013_out_20231023.log
```

```
canu -assemble -p ecoli -d ecoli-erate-0.025 genomeSize=4.8m
correctedErrorRate=0.025 -pacbio-corrected ecoli-
manual/ecoli.trimmedReads.fasta.gz saveReads=true
gnuplotImageformat=svg 2>assemble-0.025_out_20231023.log
```

\*trimmed reads created during second step

\*The error rate specifies the difference in overlap between two corrected reads which is typically <1% (canu default value 0.045) for PacBio data and <2% (canu default 0.144) for Nanopore data (<1% on newest chemistries). Higher rate, more sensitive.

\*Notice in the output there are separate directories for each error rate you specify.

18

18

## Running Canu

- We will run default with correcting, trimming and assembling all in one command:

```
$ canu -p ecoli -d ecoli-pacbio genomeSize=4.8m -pacbio-raw
pacbio.fastq saveReads=true > CanuRun_20231023.out \
2>CanuRun_20231023.log **What are we saving?

*where are reads....include pathway in your command
-p assembly-prefix
-d output directory
input types:
-pacbio-raw -pacbio-corrected -nanopore-raw -nanopore-corrected fastq or
fasta format

\ = line continuation - don't need if you have room to write it out!!!
```

**kmer genie:** estimates the best k-mer length for genome de novo assembly:  
<http://kmergenie.bx.psu.edu> Chikhi & Medvedev 2014 Bioinformatics

19

19

## Running Canu - job control

**Ctrl - z** - stops job running at command line

**bg** - moves to background

**jobs** - see what is running

**fg** - job number - move job to foreground

20

## Running Canu

- We will run default with correcting, trimming and assembling all in one command:

```
$ canu -p ecoli -d ecoli-pacbio genomeSize=4.8m -pacbio-raw
pacbio.fastq saveReads=true > CanuRun_20221017.out \
2>CanuRun_20231023.log **What are we saving?

*where are reads....include pathway in your command
-p assembly-prefix
-d output directory
input types:
-pacbio-raw -pacbio-corrected -nanopore-raw -nanopore-corrected fastq or
fasta format

\ = line continuation - don't need if you have room to write it out!!!
```

**kmer genie:** estimates the best k-mer length for genome de novo assembly:  
<http://kmergenie.bx.psu.edu> Chikhi & Medvedev 2014 Bioinformatics

21

21

## Canu output files - all found in helpdocs

- **ecoli\*.report** - assembly analysis log - histograms of read lengths, kmers and raw/corrected reads. summary of corrected data, overlaps and contig lengths

### READS

- **ecoli\*.correctedReads.fasta.gz** - The sequences after correction, trimmed and split based on consensus evidence. Typically >99% for PacBio and >98% for Nanopore but it can vary based on your input sequencing quality
- **ecoli\*.trimmedReads.fasta.gz** - The sequences after correction and final trimming. The corrected sequences above are overlapped again to identify any missed hairpin adapters or bad sequence that could not be detected in the raw sequences.

### SEQUENCE

- **ecoli\*.contigs.fasta** - Everything which could be assembled and is part of the primary assembly, including both unique and repetitive elements.
- **ecoli\*.unassembled.fasta** - Reads and low-coverage contigs which could not be incorporated into the primary assembly.

**How many contigs to we have?**

22

22

## Canu output files - all found in helpdocs

### SEQUENCE

- **ecoli.contigs.fasta** - Everything which could be assembled and is part of the primary assembly, including both unique and repetitive elements.
- **ecoli.unassembled.fasta** - Reads and low-coverage contigs which could not be incorporated into the primary assembly.

The header line for each sequence provides some metadata on the sequence:

```
>tig00000001 len=4665109 reads=10220 class=contig suggestRepeat=no
suggestBubble=no suggestCircular=yes
trim=20235-4660825
```

**len** - Length of the sequence in bp.

**reads** - Number of reads used to form the contig.

**class** - Type of sequence. Unassembled sequences are primarily low-coverage sequences spanned by a single read.

**suggestRepeat** - If yes, sequence was detected as a repeat based on graph topology or read overlaps to other sequences.

**suggestBubble** - If yes, sequence is likely a bubble based on potential placement within longer sequences.

**suggestCircular** - If yes, sequence is likely circular.

**trim** - X-Y to indicate the non-redundant coordinates

23

23

## Running Canu

### Nanopore data

```
canu -p ecoli -d ecoli-oxford genomeSize=4.8m maxInputCoverage=100 -
nanopore ecoliI2mgI655_R10_3_guppy_345_HAC.fastq
```

### PacBio HiFi with HiCanu

```
canu -p asm -d ecoli_hifi genomeSize=4.8m -pacbio-hifi ecoli.fastq
```

### Multiple Technologies & Multiple Files

```
canu -p ecoli -d ecoli-mix genomeSize=4.8m -pacbio pacbio.fastq.gz
-nanopore oxford.fasta.gz
```

### Trio Binning Assembly

- Using parental short-read sequencing

```
canu -p asm -d ecoliTrio genomeSize=5m -haplotypeK12 K12.parental.fasta -
haplotypeO157 O157.parental.fasta -pacbio F1.fasta
```

24

24

## Genome coverage

- How much coverage is enough?  
4.5 Mb - 223Mb fastq reads (25X)  
- 13,124 reads  
- 52,496 lines

Pacific Biosciences released P6-C4 chemistry reads for Escherichia coli K12. You can [download them from their original release](#), but note that you must have the [SMRTpipe software](#) installed to extract the reads as FASTQ. Instead, use a [FASTQ format 25X subset](#) (223MB). Download from the command line with:

Try some assemblies with filtered data sets

25

25

## Using canu - split reads

- Count and split files:  
\$ wc -l pacbio.fastq    n=52,496  
\$ split -l  
- I create smaller file with n lines  
  
- 60% 31,498 - lines  
\$ split -l 31498 pacbio.fastq  
\$ mv xaa ecoli\_filtered\_0.60.fastq  
\$ rm the rest (xa\*)  
  
- confirm number of lines and reads

26

26

## Genome coverage

- How much coverage is enough?  
4.5 Mb - 223Mb fastq reads (25X), 13,124 reads  
52496 lines

Try some assemblies with filtered data sets:

0.80 - 10,499 reads, 180M, ~22X    How many lines?

0.75 - 9,843 reads, 168 Mb, ~18X

0.60 - 7,874 reads, 133Mb, ~15X

0.50 - 6,562 reads, 111Mb, ~12.5X

0.40 - 5250 reads, 89Mb, ~10X

0.25 - 3,281 reads, 56Mb, ~ 6.3X

**\*\*Don't forget to split on line counts not reads!**<sup>27</sup>

27

## Running Canu

```
$ canu -p ecoli -d ecoli-pacbio genomeSize=4.8m -
pacbio-raw pacbio.fastq saveReads=true >
CanuRun_20231023.out 2>CanuRun_20231023.log
```

**\*\*What are we saving?**

```
-p assembly-prefix
-d output directory
```

**\*\*Make sure you change output file & directory names**

```
canu -p ecoli-60 -d ecoli-pacbio-60 genomeSize=4.8m
-pacbio-raw ecoli_filtered_0.60.fastq saveReads=true
> CanuRun-60_20231023.out
2> CanuRun-60_20231023.log
```

28

28

## Genome coverage

- How much coverage is enough?

Full data set:

4.8 Mb - 223Mb fastq reads (25X), 13,124 reads

Percent Reads	Coverage	Contigs	Unassembled Sequences	Unassembled Length (kb)	Genome Size (Mb)
1	25X				
0.8	22X				
0.75	18X				
0.6	15X				
0.5	12.5X				
0.25	6.3X				

29

29

## Genome coverage

- How much coverage is enough?


Full data set:

4.8 Mb - 223Mb fastq reads (25X), 13,124 reads

Percent Reads	Coverage	Contigs	Unassembled Sequences	Unassembled Length (kb)	Genome Size (Mb)
1	25X	1	2	25	4.8
0.8	22X	11	21	258	4.8
0.75	18X	18	37	446	4.6
0.6	15X	48	150	1276	4.5
0.5	12.5X	78	449	3154	4.0
0.25	6.3X	59	1152	6162	1.0

30

30

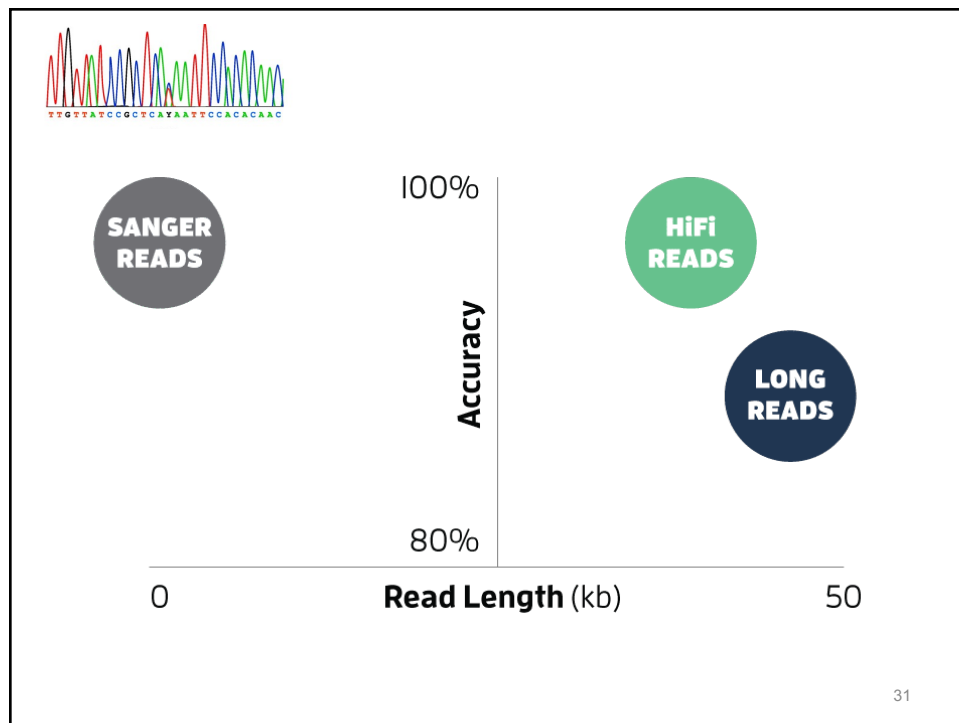

31

## Genome coverage

NNNNACGATCGACTAGCACTACGACTACTCTGCTOGACTOCTCTACTTACTACTATCTACTACTATGCTATCGCTGATGCT

How many times has genome been sequenced?

1. random distribution of reads
2. overlap detection does not vary across genome
3. number of times base sequenced - Poisson distribution
4. can be used to model any discrete occurrence given an average number of occurrences

Lander ES, Waterman MS. 1988. Genomics

32

32




## Poisson Distribution

The probability of a given number of events occurring in a fixed interval of time and/or space if these events occur with a known average rate and independently of the time since the last event.

Reads are not distributed evenly over an entire genome, simply because the reads will sample the genome in a random and independent manner

Lander-Waterman Model  
Coverage  $c = L * N / G$  where  $L$  is the read length,  $N$  is the number of reads and  $G$  is the genome size

Can be modeled by a Poisson distribution where  $\lambda = c$

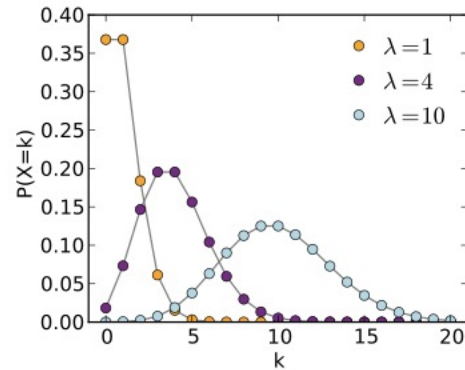

[https://www.illumina.com/documents/products/technotes/technote\\_coverage\\_calculation.pdf](https://www.illumina.com/documents/products/technotes/technote_coverage_calculation.pdf)

33

## Genome coverage

Coverage	$P(x=0)$	% sequenced
0.25	0.78	22%
0.5	0.61	39%
0.75	0.47	53%
1	0.37	63%
1.5	0.223	77.7%
2	0.135	87.5%
3	0.05	95%
4	0.018	98.2%
5	0.0067	99.33%
6	0.0025	99.75%
7	0.0009	99.91%
8	0.0003	99.97%
9	0.0001	99.99%
10	0.000045	99.995%

34

34

## Genome assemblers

FALCON & FALCON-unzip - PacBio

<https://pb-falcon.readthedocs.io/en/latest/about.html>

MaSuRCA - Illumina, PacBio, Nanopore

<https://github.com/alekseyzimin/masurca>

SPAdes - Illumina, PacBio, Nanopore

<https://cab.spbu.ru/software/spades/>

Hinge - PacBio, Nanopore

<https://github.com/HingeAssembler/HINGE>

Abyss - Illumina

<https://github.com/bcgsc/abyss>

Shasta - Nanopore

<https://github.com/chanzuckerberg/shasta>

35

35

## Genome Assembly Problem Set

**A. Using `ecoli-0.25.contigs.fasta`, write a script that reports:**

1. The number of contigs in the file
2. The shortest contig
3. The longest contig
4. Total contig length
5. The L50 size
6. The N50 size

The fasta file for the exercise:

[ecoli\\_0.25.contigs.fasta](#)

36

36

## N50 size

If we place our contigs from largest to smallest on the genome, 50% of the genome in contigs as long as or larger than N50 value

Example: 1 Mbp genome

50%



N50 size = 30 kb

(300k+100k+45k+45k+30k = 520k  $\geq$  500kb)

**A greater N50 is usually a sign of assembly improvement**

- Comparable with genomes of similar size
- Genome composition can bias comparisons
- Low L50 vs High N50

37

37

## L50 size

Number of contigs that are as long or longer than the N50 value

Example: 1 Mb genome

50%



N50 size = 30 kb L50 - contained in 5 contigs

(300k+100k+45k+45k+30k = 520k  $\geq$  500kb)

- Low L50 vs High N50
  - longer sequences and fewer of them....in theory
  - lower stringency can inflate N50

38

38

## Genome Assembly Problem Set

### B. Working with a soft repeat-masked genome assembly with gaps:

When running RepeatMasker or other software that identifies repetitive sequences in a genome, the resulting sequence can be “soft-masked” where the repetitive elements are in lower-case letters. Any gaps present in the genome, where the sequence is unresolved are marked with “N”s

gap                      soft-masked repeat

```

NNNNNNNNNNNNNcaaacaaatatacaaagacAAAAATTGCCA
CAGCAAAGACAAAGAGATAAATAAAAGGCACAAAATTGTCAC
  
```

39

39

## Genome Assembly Problem Set

### B. For the following exercise, write a script that parses a fasta file, *D. melanogaster* chromosome assembly, and identify the following:

1. How many contigs?
2. Nucleotide content:
  - number of each nucleotide both masked (a,c,g,t) and not (A,C,G,T)
3. What proportion of the genome is comprised of gaps?

The fasta file for the exercise:

[D\\_melanogaster\\_genomic.fna](#)

Genome assembly downloaded from:  
[https://www.ncbi.nlm.nih.gov/datasets/genome/GCF\\_000001215.2/](https://www.ncbi.nlm.nih.gov/datasets/genome/GCF_000001215.2/)

40

40